INSIGNIA™

QUICK SETUP GUIDE | NS-WHP314

2.4 GHz Digital Wireless Stereo Headphones

Package contents

Headphones and docking station



AC power adapter

User Guide

Quick Setup Guide

RCA audio cable

3.5 mm-to-RCA adapter cable

Connecting the headphones

Caution: To prevent damage to your system, make sure that all components are turned off before making the connections. The following diagram shows a typical user installation.

In this example the docking station is connected to the audio output of a TV and the audio input of a stereo system (optional). This optional connection is helpful if your audio source component only has one audio output and you want to connect it to both the docking station and another component, like a stereo system.

Note: If your audio device does not have RCA outputs, you can use the 3.5 mm-to-RCA adapter (included) to make the connections. Your setup may differ from the example shown here.

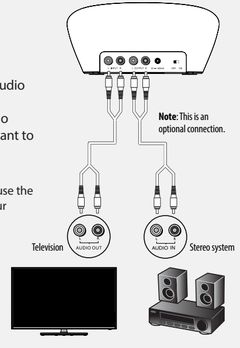

Connecting the AC adapter to the docking station

1 Connect the AC adapter connector to the docking station's **DC 5V** jack.
2 Connect the AC adapter plug to an AC power outlet.
3 Turn the **ON/OFF** switch on the back of the docking station to "ON." The **PAIRING** indicator begins to blink (blue).

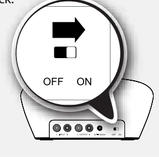

Charging the headphones

Important: Before using the wireless headphones for the first time, make sure that the batteries are fully charged for at least four hours.

To charge the headphones:

- Slide the **OFF/ON** switch on the docking station to **ON**.
- Place the headphones onto the docking station. Make sure that the headphone charging contacts and the docking station charging pins make contact by aligning the arrows (as shown below) when you put the headphones in the charging station.
- The docking station **Charging** indicator turns red to indicate the headphones are charging.
- When the headphones are fully charged (which takes up to four hours), the docking station **Charging** indicator turns green.
- When the headphone battery charge is low, the **Power/Pairing** indicator on the headphones blinks red. The **Power/Pairing** indicator on the headphones turns red 30 minutes prior to the batteries being exhausted.

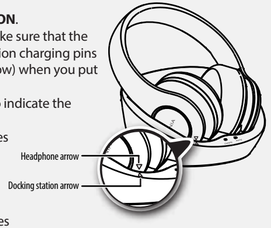

Notes:

- It can take up to four hours to charge the batteries. The batteries will last up to eight hours with continuous use (depending on the headphone volume level and distance from the docking station).
- The headphones cannot be charged when the docking station is turned off.

Turning on and pairing your headphones

1 Slide the **ON/OFF** switch on the docking station to **ON**. The **PAIRING** indicator blinks (blue).
2 Press the ⏻ (power) switch on the right earpiece to turn on the headphones. The **POWER/PAIRING** indicator on the headphone blinks (blue).
3 When the **POWER/PAIRING** indicator on the headphones and the **PAIRING** indicator on the docking station both light steadily blue, an active link is established between the headphone and the docking station. The system is now on and ready to be used.

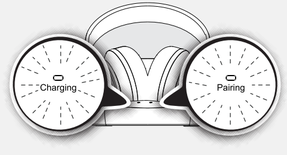

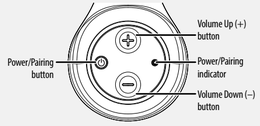

Right earpiece

Notes:

- Autopairing takes 5-10 seconds.
- If the charge on the headphone batteries is low, the **POWER/PAIRING** indicator on the headphones blinks red. When this happens, you should charge the headphones.

Tip: If the power indicators on the headphones and docking station continue to blink after 30 seconds, they are no longer paired to each other. If this happens, follow these steps:

- Make sure that the headphones and docking station are within range of each other (ideally in the same room).
- Turn off the headphones and the docking station.
- Turn on both the headphones and the docking station. The lights will initially blink, then they should turn on steady.

Listening to your digital wireless stereo headphones

1 Turn on the headphones and docking station. Make sure that your docking station and headphones are wirelessly paired.
2 Set the headphone volume level to the minimum.
3 Put your headphones on your head. Adjust the fit until you feel comfortable.
4 Turn on your audio source and begin playback. Depending on the audio source, you may need to turn up the volume on the audio source.
5 Adjust the headphone volume to your normal listening level.

Caution: Continuous use at high volume may permanently damage your hearing.

Note: If the system is connected to a TV, you may want to turn off the TV sound to prevent hearing sound from the TV speakers. Refer to your TV manual.

Turning off your headphones

1 Press and hold (more than two seconds) the ⏻ (power) switch located on the headphones' right earpiece to turn off the headphones.
2 Slide the **ON/OFF** switch on the docking station to **OFF** to turn off the docking station.
Note: It's important to turn the headphones off when not in use to conserve the battery, or if you prefer you can leave them on as long as they are placed in the docking station.

Specifications

Input: AC 100-240V~ 50/60 Hz 0.2 A
Output: 5V, 500mA

One-year limited warranty

Visit www.insigniaproducts.com for details.

Contact Insignia:

For customer service, call 1-877-467-4289 (U.S. and Canada) or 01-800-926-3000 (Mexico)
www.insigniaproducts.com

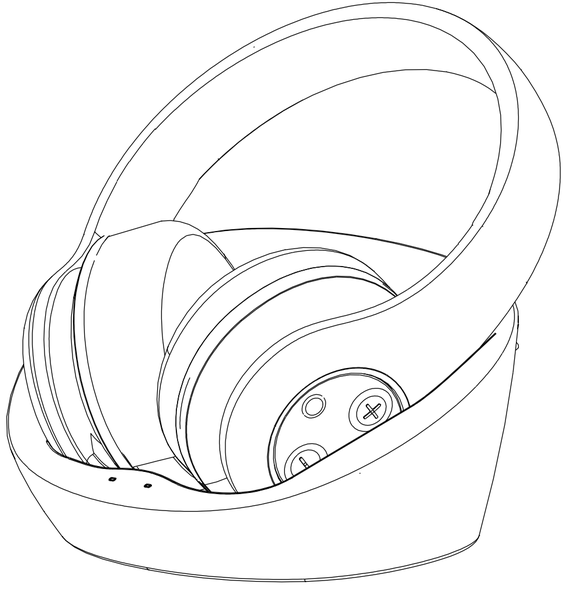

INSIGNIA is a trademark of Best Buy and its affiliated companies. Registered in some countries.
Distributed by Best Buy Purchasing, LLC., 7601 Penn Ave South, Richfield, MN 55423 U.S.A.
©2014 Best Buy. All rights reserved.
Made in China
V1 ENGLISH 14-0124

Before using your new product, please read these instructions to prevent any damage.